

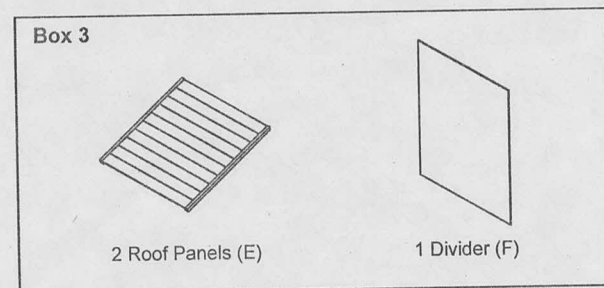
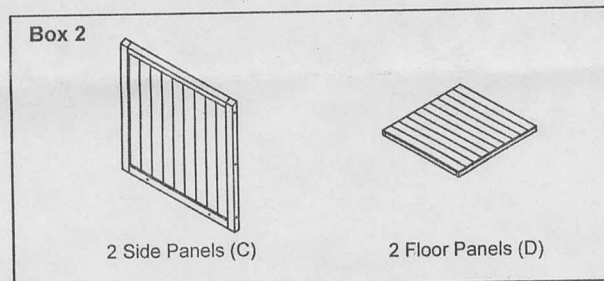


MPL006 DUPLEX™ WOOD PET HOUSE


COMPONENTS

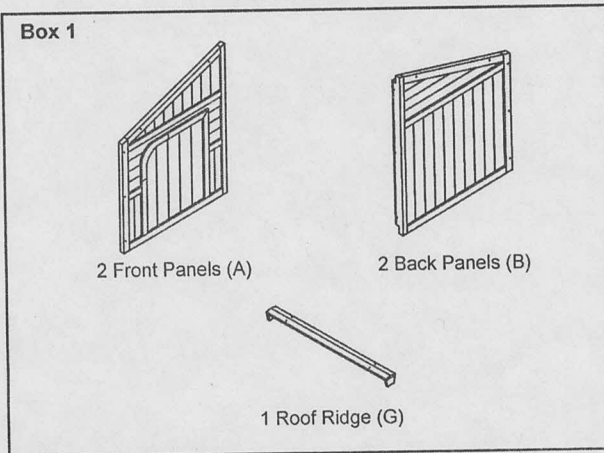

HARDWARE

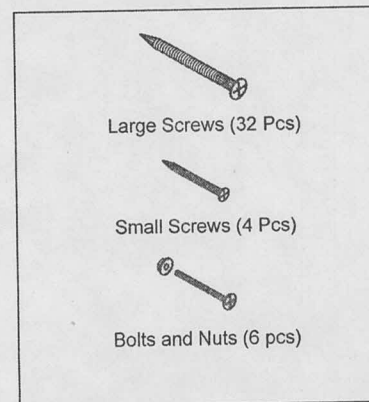

TOOL REQUIRED

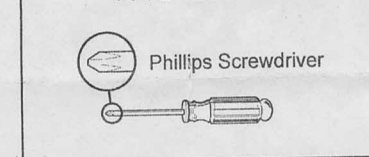

NOTE:

- *Read all instructions before starting
- *Do not completely tighten any bolts until the unit is fully assembled and sitting on a level surface.

STEP 1

Attach the front panels (A) together with 3 bolts and nuts. Then, attach the back panels (B) together with 3 bolts and nuts.

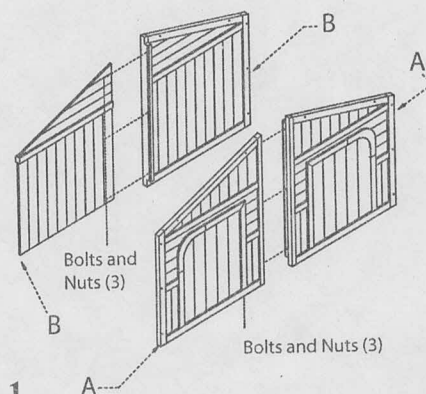


figure 1

